


# C-POWER<sup>®</sup>

AC AUTOMATIC CONTROL

## INSTALLATION INSTRUCTIONS & OWNER'S MANUAL Model: 93-ACMC100I-A

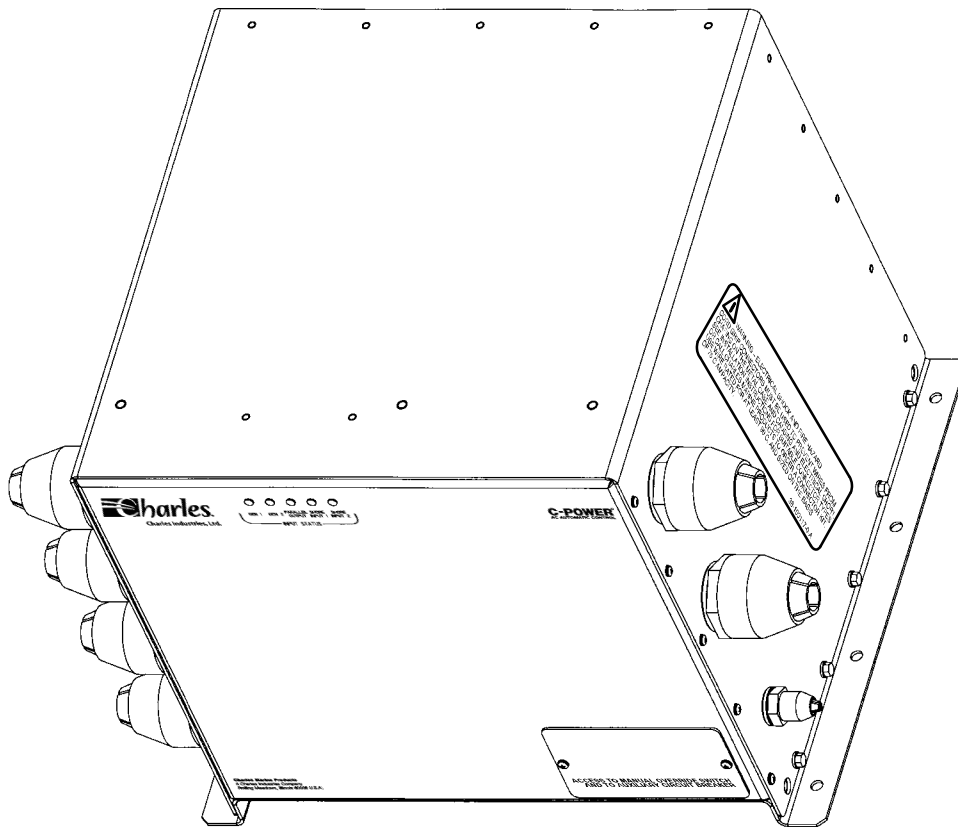

# Contents

<b>INTRODUCING... THE AC MASTER CONTROLLER .....</b>	<b>3</b>
Warranty/Registration .....	3
Manual Purpose .....	3
<b>APPLICATION .....</b>	<b>3</b>
<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>3</b>
Warnings .....	3
Installation Precaution .....	3
Environmental Precaution .....	4
Application Precaution .....	4
Damaged Unit Precaution .....	4
Disassembly Precaution .....	4
<b>MOUNTING .....</b>	<b>4</b>
Choosing Mounting Hardware .....	4
Mounting the AC Master Controller .....	4
Choosing the Appropriate Wire Type and Gauge .....	5
Choosing Electrical Wiring Hardware .....	5
Overcurrent Protection – Input .....	6
Making AC Master Controller Connections .....	6
<b>WARRANTY &amp; CUSTOMER SERVICE .....</b>	<b>7</b>
Warranty .....	7
Warranty Service and Repair .....	7
Customer Service .....	8
<b>SPECIFICATIONS .....</b>	<b>8</b>

## INTRODUCING... THE AC MASTER CONTROLLER™

*Thank you* for purchasing the AC Master Controller! The AC Master Controller allows you to automatically select one or two power sources from four AC inputs: two that are from shore power, and two that are from generators.

### Warranty/Registration

Before proceeding, complete and mail back the Warranty Registration card.

### Manual Purpose

With your personal safety in mind, this manual lists important safety precautions first, then covers installation, operation, maintenance, troubleshooting, warranty, and customer service information.

## APPLICATION

The AC Master Controller automatically selects the first input AC from a possible 2 inputs for Bus A and Bus B inputs. Each output bus has a generator and a shore power input.

## IMPORTANT SAFETY INSTRUCTIONS

**SAVE THESE INSTRUCTIONS.** This manual contains important safety and operating instructions for the AC Master Controller. Read the entire manual before using this unit. Also read all instructions and cautions for and on the AC Master Controller.

### Warnings

#### **WARNING — HIGH VOLTAGE**

To avoid serious injury or death from high voltage electrical shock, disconnect AC shore power before opening panel.

#### **WARNING — ELECTRICAL SHOCK AND FIRE HAZARD**

Cord grip connectors must be used to prevent wires from chafing on the metal case and causing an electrical short. See installation instructions for suitable connector types or call Charles Marine Products to order a connector kit.

### Installation Precaution

Boat wiring is a complex task that can cause shock, corrosion and other hazards if not done properly by trained, experienced personnel. For more information on this subject contact the **American Boat and Yacht Council (ABYC)** or see the standards and regulations below:

**American Boat and Yacht Council**  
E-8 "Alternating Current (AC)  
Electrical Systems on Boats"

3069 Solomon's Island Road  
Edgewater, MD 21037  
Telephone: 410.956.1050  
FAX: 410.456.2737

**NFPA Standard 302.**  
"Pleasure and Commercial Motor Craft"

National Fire Protection Association  
1 Batterymarch Park  
P.O. Box 9101  
Quincy, MA 02269-9401  
Telephone: 800.344.3555

**Rules and Regulations for Recreational Boats**

Excerpts from the United States Code (USC) and the Code of Federal Regulations (CFR) (U.S. Coast Guard Regulations) are available from the **American Boat and Yacht Council** listed above.

*Note: Installation of the AC Master Controller must be made in accordance with all applicable standards and regulations.*

**Environmental Precaution**

The AC Master Controller is intended for installation inside an engine room or elsewhere inside the boat. Make sure that the location will not subject the unit to rain, snow, excessive moisture, or excessive heat.

**Application Precaution**

These units are intended for hard-wired, permanent, on-board applications. Use of attachments not recommended or sold by Charles Marine Products may result in risk of fire, electrical shock or personal injury.


**Damaged Unit Precaution**

Do not operate the AC Master Controller if it has received a sharp blow, been dropped, immersed in water or otherwise damaged. See the section in this manual on *Warranty & Customer Service* for repair information.

**Disassembly Precaution**

Do not disassemble the AC Master Controller. See the sections in this manual on *Maintaining the AC Master Controller*, *Troubleshooting the AC Master Controller* and *Warranty & Customer Service*.

**MOUNTING**

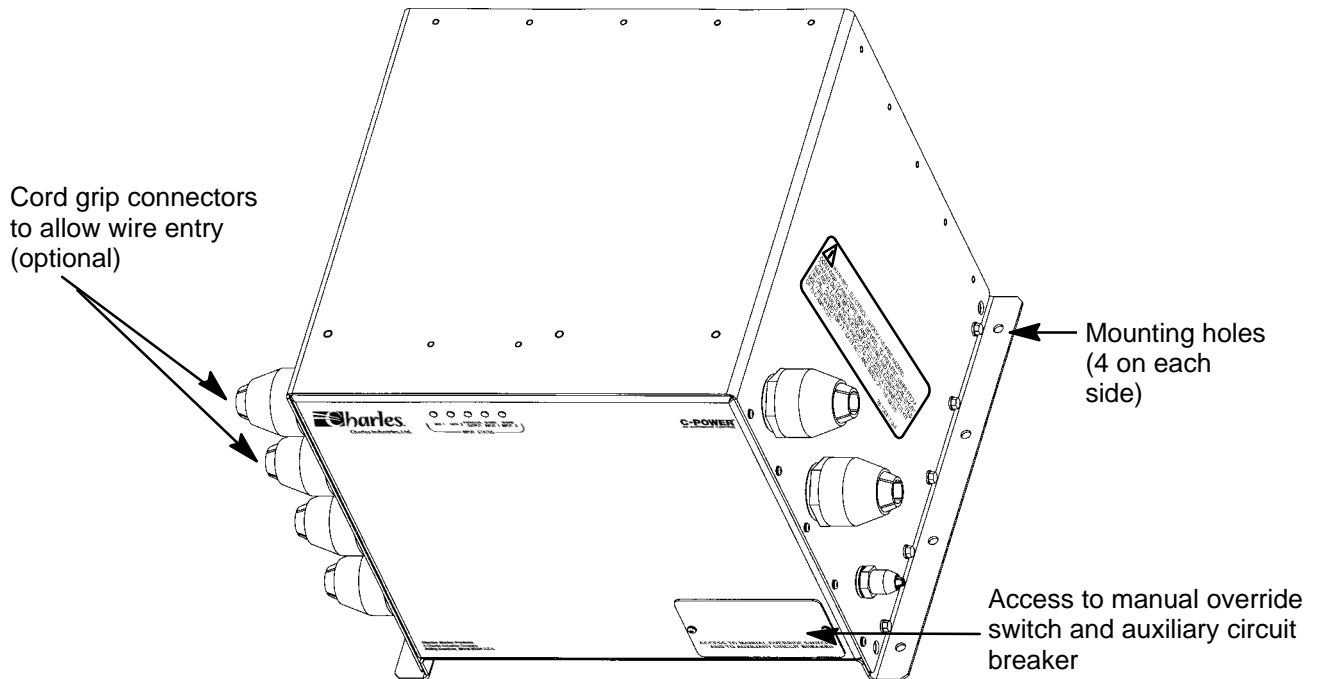

**Figure 1. AC Master Controller Access Openings**

**Choosing Mounting Hardware**

As with any marine equipment, secure mounting is of utmost importance. You will need to provide four bolts or screws to secure the unit. They must be 1/4-inch in diameter. The screws or bolts you choose should be backed with a flat washer and kept vibration-free with a split-ring lock washer. If using bolts, they must be secured on both sides of the bulkhead and also backed with a washer or washer plate. If using screws, they should be at least 1" long. All hardware must be corrosion-resistant stainless steel or cadmium-plated steel.

**Mounting the AC Master Controller**

The AC Master Controller may be mounted horizontally on a deck or vertically on a bulkhead.

**Horizontal Mount**

**WARNING – ELECTRICAL SHOCK HAZARD**

**Use care when drilling to avoid contact with any wires or live components.**

Step	Action
1.	Carefully lower and position the unit on the deck in the exact location the unit will be installed. <i>Note: The wiring enclosure should be visible and accessible.</i>
2.	Mark the location of the mounting holes.
3.	Remove the unit and drill the eight marked holes with the proper-sized drill bit.
4.	Realign the unit's mounting holes with the drilled holes and fasten the unit to the deck with the appropriate mounting hardware.
5.	Firmly secure all mounting hardware.

**Vertical Mount**

**WARNING – ELECTRICAL SHOCK HAZARD**

**Use care when drilling to avoid contact with any wires or live components.**

Step	Action
1.	Carefully lower and position the unit on the bulkhead in the exact location the unit will be installed. <i>Note: The wiring compartment should be at the bottom to ensure proper cooling of the unit.</i>
2.	Mark the location of the mounting holes.
3.	Remove the unit and drill eight marked holes with the proper-sized drill bit.
4.	Realign the unit's mounting holes with the drilled holes and fasten the unit to the bulkhead with the appropriate mounting hardware.
5.	Firmly secure all mounting hardware.

**Choosing the Appropriate Wire Type and Gauge**

All input and output conductors should be at least 6 AWG, stranded, 600 volt rating, UL type AWM, UL 1426 or equivalent, or a UL listed marine shore power cable. See ABYC standard E-8 for more details on conductor types and sizing (gauge).

*Note: Use UL Recognized ring or captive spade terminals for making all connections to the terminal block regardless of the wiring method chosen.*

**Choosing Electrical Wiring Hardware**

Wiring should only be done with a jacketed cable (.030 inches jacket thickness minimum) such as UL type 1426 boat cable, or by using a UL listed marine cable set wire (type SO or equivalent). This wiring should be installed in the boat in a protected area and routed to avoid contact with sharp edges or hot surfaces.

**WARNING – ELECTRICAL SHOCK HAZARD AND FIRE HAZARD**

**Cord grip connectors must be used to prevent wires from chafing on the metal case and causing an electrical short. See Table 1 for suitable connector types or call Charles Marine Products to order a connector kit.**

The AC Master Controller is intended for hard-wiring in a permanent location. Cord grip connectors with water sealing bushings and strain relief are required to secure wires or cables going into or out of the AC Master Controller.

Charles Marine Products recommends the cord grip connector kit 97-001758-A. Individual parts are listed in Table 1.

Table 1. Recommended Cord Grip Connector and Accessories

Manufacturer	Cord Grip		Sealing Washer		Locknut		Cord Range	Cord Type
	Part #	# to Order	Part #	# to Order	Part #	# to Order		
Thomas & Betts	2690	1	5262	1	141	1	.125-.275	6/24 cordset
Thomas & Betts	2707	6	5262	6	145	6	1.390-1.650	2/3 cordset

Various other cord grip connectors may be suitable for use with the AC Master Controller. Contact Charles Marine Products customer service for information.

**Overcurrent Protection – Input**

Overcurrent protection must be provided at the time of installation by a circuit breaker on the primary (shore) supply circuit. A two-pole shore power main circuit breaker is required for the shore power line going into the AC Master Controller. For 240 volt (or 220 volt), 100-amp service, this should be rated at 100 amps, 240 volts, 3000 AIC and be of the long-time delay type.

**Making AC Master Controller Connections**

**WARNING – HIGH VOLTAGE**

To avoid serious injury or death from high voltage electrical shock, disconnect AC shore power before opening panel.

Follow the procedure below to make the appropriate connections.

Step	Action
1.	Remove the access cover.
2.	Install the cord grip connectors using the sealing gaskets and locknuts.
3.	Undo the chucks from the cord grip connectors.
4.	Slide the cord grip connectors down and over the cables from the primary (shore power) circuit breaker and to the secondary (boat) circuits.
5.	Insert the cables through the cord grip connectors and cut to length.
6.	Strip back the insulation.
7.	Use UL Recognized ring or captive spade terminals for making all connections.
8.	Connect all wiring based on the chosen wiring method.
9.	Tighten the cord grip connectors.
10.	Reinstall the access cover.

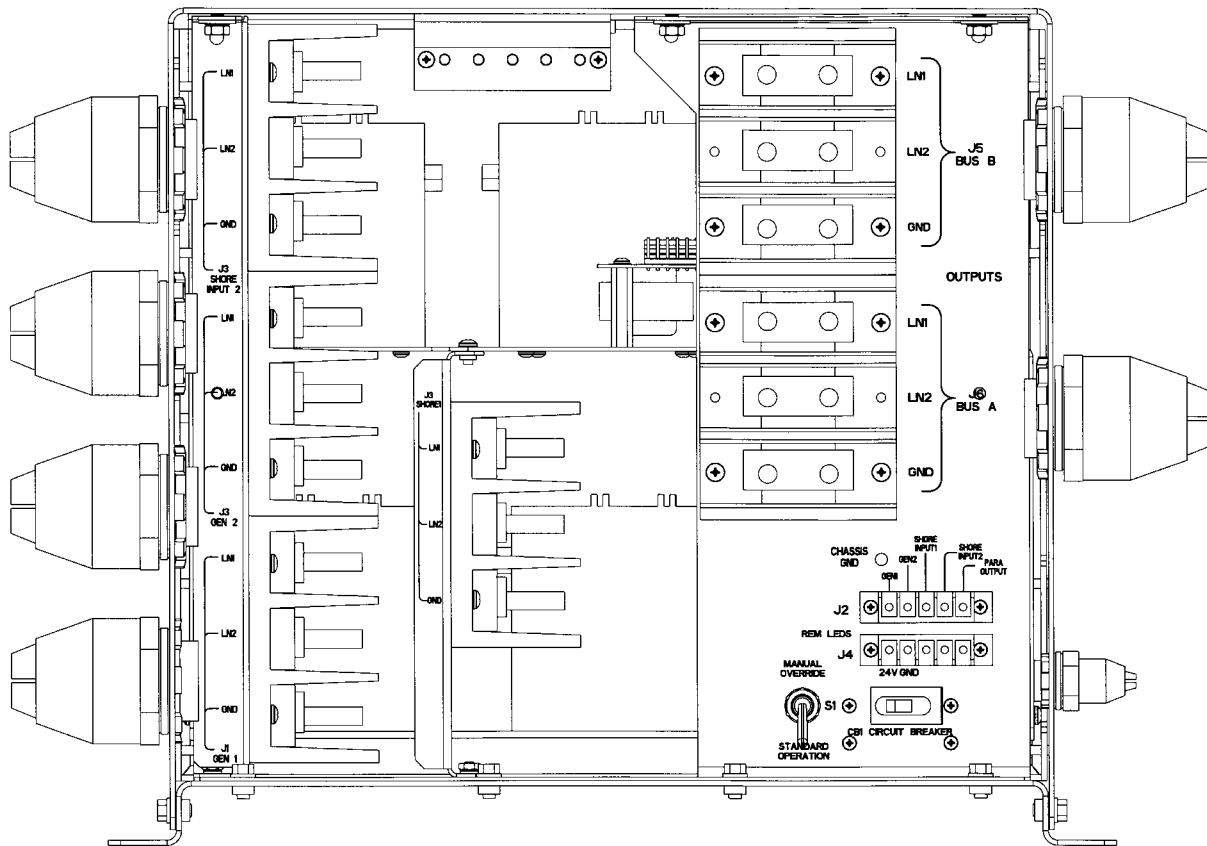


Figure 2. Wiring Contacts for the AC Master Controller (all covers removed)

## WARRANTY & CUSTOMER SERVICE

### Warranty

CHARLES MARINE PRODUCTS warrants the AC Master Controller will be free from defects in materials and workmanship which cause mechanical failure for one (1) year, as set forth in the Limited Warranty. Review this warranty carefully for information on what is covered by its terms. Complete and return the warranty registration card within ten (10) days of purchase to establish proof of ownership and validate the warranty coverage. You must provide notice of any alleged defect in material of workmanship within thirty (30) days of discovering the problem, and within the warranty period. Follow the procedure outlined below to obtain warranty service.

### Warranty Service and Repair

If the unit fails to operate properly after following all the instructions in the manual, or if the AC Master Controller requires service, take the following steps:

1. Contact Charles Marine Products Customer Service and obtain a "Returned Goods Authorization" (RGA) number and a Service Center address
2. Ship or mail the AC Master Controller together with the RGA to the appropriate Service Center. Shipping costs to and from the Service Center are your responsibility
3. When service is completed, Charles Marine Products will return the AC Master Controller to you.

**Customer Service**

If technical assistance or customer service is required, contact Charles Marine Products at:

(847) 806-6300 (Customer Service)  
 (847) 806-6352 (FAX)

***For correspondence only, mail to:***

Charles Marine Products  
 Charles Center  
 5600 Apollo Drive  
 Rolling Meadows, IL 60008-4049

**SPECIFICATIONS**

The specifications for the AC Master Controller are listed in Table 2.

**Table 2. AC Master Controller Specifications**

<b>Feature</b>	<b>U.S.</b>	<b>Metric</b>
Input Voltage	240 VAC	
Input Current	100 Amps	
Output Voltage	240 VAC	
Output Current	200 Amps	
Operating Frequency	50/60 Hz	
Operating Temperature	32° to 122° F	0° to 50° C
Approximate Weight	135 pounds	61.24 kilograms
Height	17.00 inches	43.18 centimeters
Width	20.50 inches	52.07 centimeters
Width (excluding the mounting flange)	17.93 inches	45.54 centimeters
Depth	18.10 inches	45.97 centimeters

